



SPACER KIT INSTALLATION

Tools Needed:

- 1/2" Wrench
- 3/16" Allen wrench

Step 1:

- Be sure to pay attention to order of parts removed from tray while disassembling.
- Begin by removing all hardware on both driver and passenger side trays. (See image 1)

Note: This includes two bolts at ends of tray, and two button heads that secure glide bar.

Step 2:

- Assemble provided hardware in same order old hardware was removed.
- Move spacers noted in Image 1 to new location noted in Image 2.
- Add new spacers between bent arms attached to tray. (Image 2)
- Add extra spacer to each button head on glide bar. (Image 2)

Note: Reuse washers from original tray.

Note: Bolt head will fit into cutout on Bent Arm.

Step 3:

- As seen in image 2, button head on bent arm is to be flipped around to provide more space for tire.


Additional Information

- With Spacer Kit installed trays can hold up to a 5" tire.

Image 1



Image 2

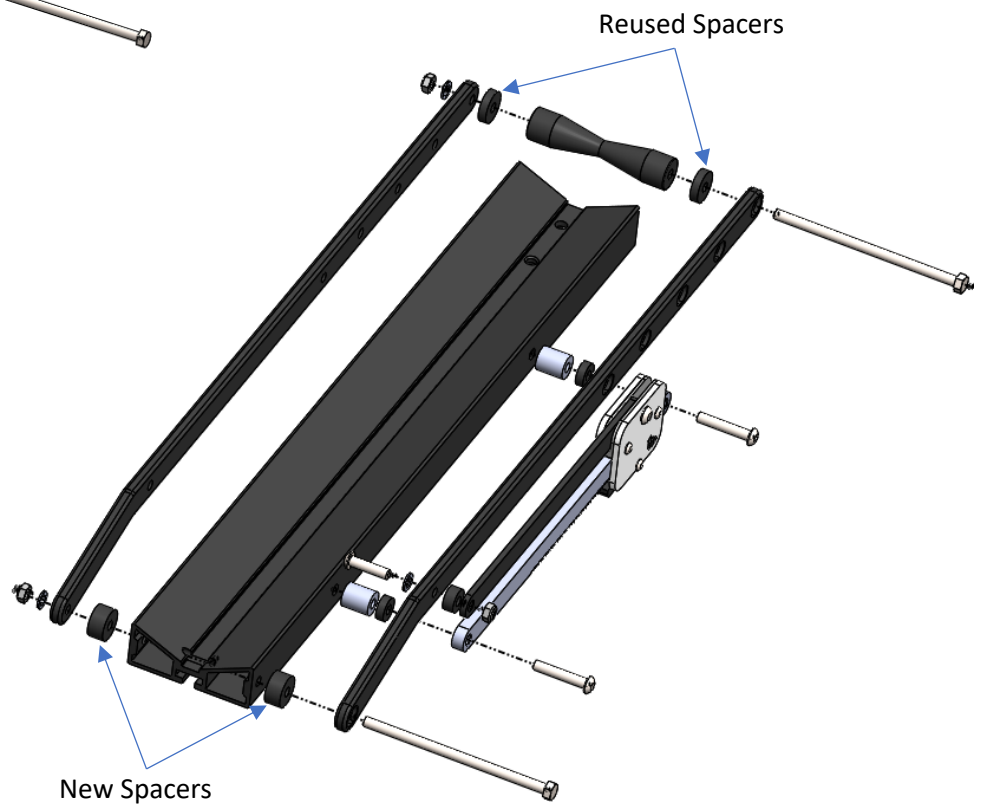

WARRANTY

All 1Up USA brand products include 100% lifetime warranty protection from factory defects or breakage under normal use.

Questions or comments? Contact our support team via email at email@1up-usa.com

1UP USA.com llc shipping information: PO Box 563, 1005 Commercial Drive Dickeyville, WI 53808.